

TRACK4G-ManualV2.indd 1

Introduction

۲

Thank you for purchasing the GTRACK4G GPS Tracker. Please ensure that you have read the product manual and instructions in full, prior to installation and use. Failure to do so may result in product failure/damage or incorrect operation and therefore impact the product performance.

Product overview

The GTRACK4G GPS Tracker has been designed to offer an efficient, effective vehicle tracking system for managing your business fleet. A 3G GPS tracking solution allows you to locate and track the whereabouts of your vehicle in real time via the Internet on a computer or Smartphone.







Product features:

- Built-in cellular and GPS antenna for easy installation
- 3G compatible
- Requires active Text/Data/Phone SIM card (Mobile SIM) not included
- · Real-time tracking with history route
- · Lithium-ion rechargeable battery
- 3 hour battery backup
- Built-in motion sensor
- Shock/displacement/ low battery/ power off/ over speed alert
- · Main power cut off alert
- Power saving sleep mode
- Built-in motion sensor
- ACC detection
- Geo-fence capable
- Remote immobilization
- A-GPS locating (improves startup performance)
- Unit dimension 75x40x12mm
- Weight 39.5g





Table of contents

۲

Introduction	n?
Broduct overview	p2
Product Overview	µz
Table of contents	ps
	p4
Package components	p5
Installation & setup	рь-9
Check list	p10-11
Function commands	p12-14
Download Smartphone App	p14
Login by Smartphone App	p15-16
Smartphone home screen	p17
Device list screen	p18
Historical route screen	p19
Geofence location screen	p20
Issue command screen	p21
Device screen	p22
Common command screen	
General command screen	p24
Alarm setting screen	p25
Login by Website	
LED indicator definition	p27
Trouble shooting guide	
Cautions	n29
Product specifications	p30-31
SIM card information	n32
APN settings	n33
Technical assistance	n34-35
IMEI/SIM card number safeguard	n36
inicial out a number saleguara	



۲





Activation & Authorisation

1. Open the rubber plug, Insert an active Text/Data/Phone SIM card that supports 3G/GPRS network into the slot and make sure the chip side is up. (Picture 1)





2. Connect power cable and relay (optional) and follow wiring diagram

۲



۲

NOTE: There is a space between password and mobile number. GTRACK4G replies (admin okay).

4. Set APN number, by sending a SMS command to the SIM card inside your device.

APN123456 SIMCARD PROVIDER (please use your local APN instead of CMNET (default), if you do not know the APN content you should contact your SIM card supplier).





For example: apn123456 xxxxxxxxx (123456) is the default password. xxxxxxxxx is your mobile SIM card provider.

 $(\mathbf{0})$

NOTE: There is a space between password and SIM card provider. For use in other countries replace the APN with the corresponding countries SIM card provider

5. Set the current time by sending a SMS command to the SIM card inside your device. For example: timezone123456 +10 (VIC daylight savings +10 hours ahead of GMT).

NOTE: There is a space between password and GMT time.









Check List

For full list and more up to date information download the checklist at https://tdj.com.au/firmware/Gator/ GTRACK4G/

1. Sim card must have active service/ dial, minimum data of 2 gbs and sms. 2. Insert the Sim card contacts side up. Plug power into the tracker module. Make sure the red wire goes to the 12v battery and the orange wire goes to 12v accessory ignition. Send sms command from your mobile phone to the tracker "admin123456_(insert your mobile number here)" sms reply to your phone should be "admin ok" Send sms command from your mobile phone to the tracker "apn123456 (insert your apn provider here)" Optus is vesinternet Telstra is telstra internet Vodafone is live.vodafone.com





SMS reply to your phone should be "apn ok"

NOTE: This tracker will work with all providers.

 $(\mathbf{0})$

This check list is important, if you type in the incorrect APN the device will not established a connection, the yellow led will not flash nor will it track.

7. Send sms command from your phone to the tracker "param1" sms reply should give details about the tracker.

e.g. imei number, internet provider and ip address this function will check if the parameters are correct.

8. Flashing yellow led is when the device is now communicating.

9. Blue flashing led has established a connection with the satellites.







Function commands

Function	Text to send to Gtrack4G	Reply
	apn+123456+space+SIM provider	apn ok
APN	apnuser+123456+space+SIM provider	apnuser ok
	apnpasswd+123456+space+ SIM provider	apnpasswd ok
admin number	admin123456+space+admin phone number	admin ok
time zone	timezone+123456+space+ GMT No.	timezone ok
time sleep	sleep123456 time	sleep time ok



۲

shock sleep (default)	sleep123456 shock	sleep shock ok
no sleep	sleep123456 off	sleep off ok
upload frequency	upload123456+space+time	upload ok
Desired circuit to immobilise	555	Cut oil OK
Arm & Disarm	111 or SF	Arm delay in 0s
Position	G123456# or where	Google map



Restart	rst	restart ok
Back to factory	format	No reply

•

Downloading Smartphone APP

For iPhone: search "GTRACK" in the App Store to download

For Android: search "GTRACK" in the App Google play store to download

For further instructions of the Apps functionality, go to <u>www.tdj.com.au/help-downloads</u> and search for your product name



Log in by Smartphone APP

Log in by IMEI/ID











Log in by Smartphone APP

Log in by Username (pending)









۲

17

()



Device List screen

	0.07 K/s 💲 ≑⁴⁵́́́́́	77% 🔿 10:47
	List	Ð
All	Online	Offline
LK210-57232	Offline ACC	OFF,Power Cut
LK210-85069	Offline ACC	OFF,Power Cut
Corolla	Offline ACC	OFF,Power Cut









Historical route screen



Geofence location screen







Issue command screen

	0.32 K/s 💲 ೆ⁵ 🖬 🖌 77% 🔾 10:48	
<	Issue command	≔
۲	Immobilize Engine	>
	Enable Engine	>
4	Arm	>
•	Disarm	>



Send commands through GPRS

Send commands through SMS





Device screen

**	0.13 K/s 💲 🖽 🖌	76% 🔿 10:48
<	LK210-64286	
	Common	>
Þ	General	>
	Edit Device	>
	Records	>



22





Common command screen

	0.13 K/s 💲 🕬 🖊 76	% 🔿 10:49
<	Common	+
Set Master	number	
Delete Mas	ter number	
Set SOS nu	mber	
Delete SOS	number	
ARM		
DimARM		
Immobilize engine on		
Immobilize engine off		
Set shake s	ensitive	
Set Move Alarm		
shut Move	Alarm	
Move upload frequency		
Rest upload	d frequency	





(4



General command screen

**	0.11 K/s 💲 👫 🖌 76	% 🔿 10:49
<	General	+
SOS alarm		
Set Auto ARM		
Auto DisARM		
Set ARM by ex	ternal power	
DisARM by ex	ternal power	
Set OverSpeed	d alarm	
shut OverSpee	ed Alarm	
Shake alarm timespan		
Listen and talk		
Language		
Set Timezone		
Reboot		
Reboot factory settings		





(4



Alarm setting screen

-	0.19 K/s 💲 👫 🖌	76% 🔿 10:49
< A	larm setting	8
Alarm Type		
SOS alarm		ON
Vibrator alarm		ON
Offline alarm		ON
Low Power		ON
Off alarm		ON
Enter the area alarr	n	ON
Leave the area alar	m	ON
Expired alarm		ON
Alert Settings		
Enable		ON
Sound		ON
Vibration		ON









۲

Open the website <u>gtrack3g.com</u>, choose IMEI No, enter the 10-digit ID code of the device, the default password is 123456, click "GO" to log in into the platform. IMEI number is printed on a sticker on the back of the unit. 26

Led indicator definition

۲

Green Indicator: Mobile Network (3G)

Status of indicator	Meaning
Flash	3G conversation start
Solid	No 3G signal
Off	Power off or in sleep mode



Blue Indicator: GPS

Status of indicator	Meaning
Flash	GPS location
	successful
Solid	Searching
Off	Power off or in sleep
	mode

NOTE: When the equipment in power saving sleep mode, the light will turn off after about 10 minutes (settable) without any operation.

 (\bullet)

Trouble shooting guide

Q: Start up Fail? A: Check all wiring connections and fuses



Q: The device cannot obtain location information?

A: Place the unit in an open area to test.

Q: How to choose SIM card?

A: The SIM card must support 3G & GPRS and ensure that the card has enough currency and credit.

Cautions

۲

Please comply with the instructions to extend the unit life:

1. Keep the unit dry. Any liquid, i.e. rain, moisture, may destroy or damage the inside circuitry.

2. Don't use & store the unit in dusty places.

3. Do not place the unit in extremely hot or cold places

4. Handle carefully. Do not vibrate or shake it violently.

5. Clear the unit with a piece of dry cloth. Do not clean with chemicals or detergents.

6. Don't paint the unit, this may cause some foreign materials left in between the parts.

7. Don't disassemble or refit the unit.







8. Please use the battery and charger provided by manufacturer. Using other batteries and chargers will cause unwanted situation.

 (\bullet)

Product specifications

- Real-time tracking
- Vibration/Displacement/Low battery/ Power off/over speed alert
- Main power cut off alert
- ACC detection
- Geo-fence
- □ History Route
- Cut and resume functions remotely
- AGPS locating









Product specifications cont....

FrequencyWCDMA 850/900/1900/2100 MHz 3G Version supportBackup Battery3.7V 370mAhNetworksWCDMA/GPRSOperating voltage9-75VLocation timeCold start 35s-80sHot start 1sHot start 1sLocation accuracy5 metersOperating temperature-20°C~+55°CDimension75*40*12mmWeight39.5g		
850/900/1900/2100 MHz 3G Version supportBackup Battery3.7V 370mAhNetworksWCDMA/GPRSOperating voltage9-75VLocation timeCold start 35s-80sHot start 1sHot start 1sLocation accuracy5 metersOperating temperature-20°C~+55°CDimension75*40*12mmWeight39.5g	Frequency	WCDMA
3G Version supportBackup Battery3.7V 370mAhNetworksWCDMA/GPRSOperating voltage9-75VLocation timeCold start 35s-80sHot start 1sHot start 1sLocation accuracy5 metersOperating temperature-20°C~+55°CDimension75*40*12mmWeight39.5g		850/900/1900/2100 MHz
Backup Battery3.7V 370mAhNetworksWCDMA/GPRSOperating voltage9-75VLocation timeCold start 35s-80sHot start 1sHot start 1sLocation accuracy5 metersOperating temperature-20°C~+55°CDimension75*40*12mmWeight39.5g		3G Version support
NetworksWCDMA/GPRSOperating voltage9-75VLocation timeCold start 35s-80sHot start 1sHot start 1sLocation accuracy5 metersOperating temperature-20°C~+55°CDimension75*40*12mmWeight39.5g	Backup Battery	3.7V 370mAh
Operating voltage9-75VLocation timeCold start 35s-80sHot start 1sLocation accuracy5 metersOperating temperature-20°C~+55°CDimension75*40*12mmWeight39.5g	Networks	WCDMA/GPRS
Location time Cold start 35s-80s Hot start 1s Hot start 1s Location accuracy 5 meters Operating temperature -20°C~+55°C Dimension 75*40*12mm Weight 39.5g	Operating voltage	9-75V
Hot start 1sLocation accuracy5 metersOperating temperature-20°C~+55°CDimension75*40*12mmWeight39.5g	Location time	Cold start 35s-80s
Location accuracy5 metersOperating temperature-20°C~+55°CDimension75*40*12mmWeight39.5g		Hot start 1s
Operating temperature-20°C~+55°CDimension75*40*12mmWeight39.5g	Location accuracy	5 meters
Dimension 75*40*12mm Weight 39.5g	Operating temperature	-20°C~+55°C
Weight 39.5g	Dimension	75*40*12mm
	Weight	39.5g







SIM card information

3G GSM TEXT/DATA/PHONE SIM CARD is required. It can be prepaid or plan, depending on usage usually \$5-\$10 per month is sufficient. The GTRACK4G operating frequency is: WCDMA 850/900/1900/2100 MHz. If the tracker is outside of this frequency range it will not work. For best coverage use Optus/Virgin & Vodafone. Telstra will only work in areas where the operating frequency is 2100MHz (generally built up/metro areas).

۲

Depending on the network provider, you may need to first install the SIM Card into a mobile phone to receive the sim card activation sms. Please ensure the SIM Card is activated before installing it into the GTRACK4G. Ensure the SIM Card has sufficient TEXT & DATA credit.

APN settings

When configuring the GTRACK4G, you need to setup the mobile network APN (Access Point Name) to your GPS tracker (refer manual pg 7-8). This is required to access the mobile data service by the tracker. Your carrier APN is: ALDI Mobile: TELSTRA.INTERNET Amaysim: YESINTERNET Optus: YESINTERNET ☐ Telstra: TELSTRA.INTERNET TPG: YESINTERNET Virgin Mobile: VIRGININTERNET Vodafone: LIVE.VODAFONE.COM Kogan Mobile LIVE.VODAFONE.COM ☐ iiNET: YESINTERNET If the APN / Service Provider is not listed above, please contact your Service Provider and ask for the APN



Technical assistance

If you need assistance setting up or using your Gator product now or in the future, call Gator Support. Australia

TEL: 03 - 8587 8898

FAX: 03 - 8587 8866

Mon-Fri 9am – 5pm AEST

Please retain this user guide for future reference.

If you would like to download a digital copy of this manual, or other Gator manuals/software, please visit the <u>http://gatordriverassist.com</u> website and click on 'Firmware & Manuals" This manual is considered correct at time of



printing but is subject to change. For latest manuals and updates refer to the website.

 (\bullet)

Copyright © 2017 by TDJ Australia All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, copying or other electronic or mechanical methods, without the prior written permission of the author.





IMEI/SIM number safeguard

Copy the IMEI/I.D. number (10-digit bar code of the device), and the SIM card number and place here for safe keeping before installing the device.

IMEI number



SIM number

Retailer

Date of purchase

